 


Introduction

The thermostat has the following approximate settings



Rotate the thermostatic head clockwise and anti-clockwise between 0 to 5 to select the required room temperature.

The thermostatic head has within its range a frost setting *. When set at the * position the thermostatic head will react when the ambient temperature drops to 7°C and allows the valve to open.

Note: Hot water must be circulating within the heating system.

The thermostatic head has within its range also an off position '0' where the valve will be closed and prevent water flowing.

It is recommended for prolonged periods of isolation, when the radiator is removed or 'dropped' during decoration, that the thermostatic head is removed prior to commencing and isolation cap is used in the fully closed position.

Technical Specification

- Maximum working pressure: 10 bar
- Maximum pressure differential: 1 bar
- Maximum water temperature: 100°C
- Maximum ambient temperature: 50°C
- Temperature adjustment: 0°C to 28°C

Dimensions

